



Installation Instructions
2 WIRE SPEED SENSOR




**Headwind
Solutions Ltd.**

1.844.304.7277
www.headwindsolutions.ca




Step1

Drill and tap into bell housing directly over top of the ring gear if there isn't a hole already available.

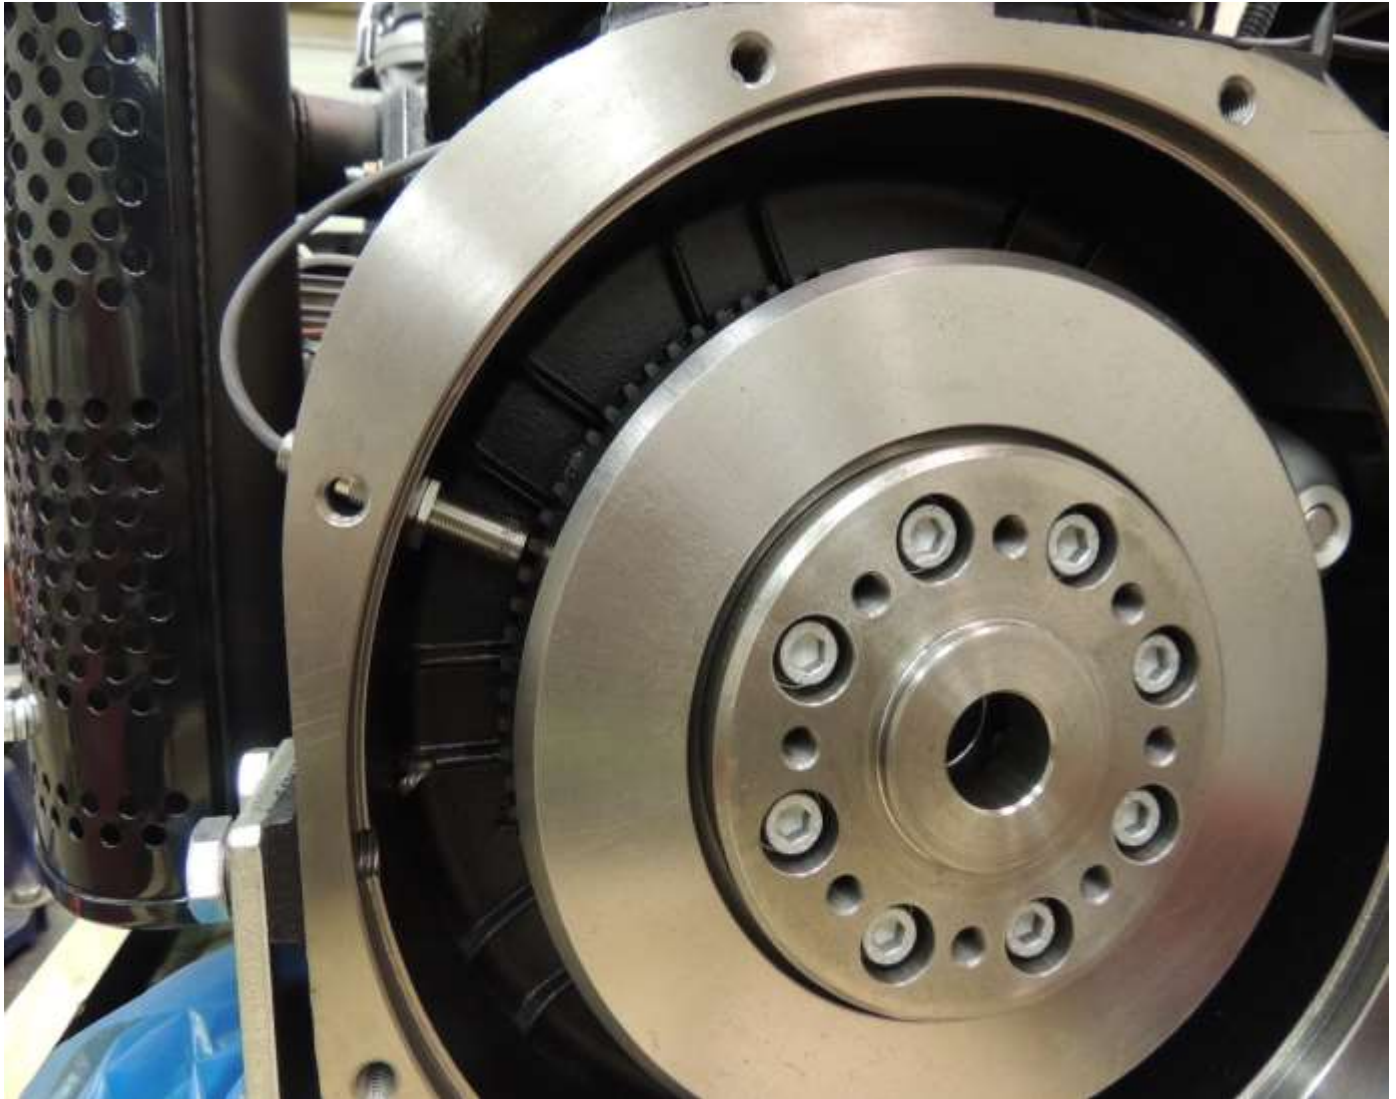

Step 2

Thread magnetic sensor in until it touches the ring gear, then back off 1/2 - 3/4 turn and then tighten jam nut.

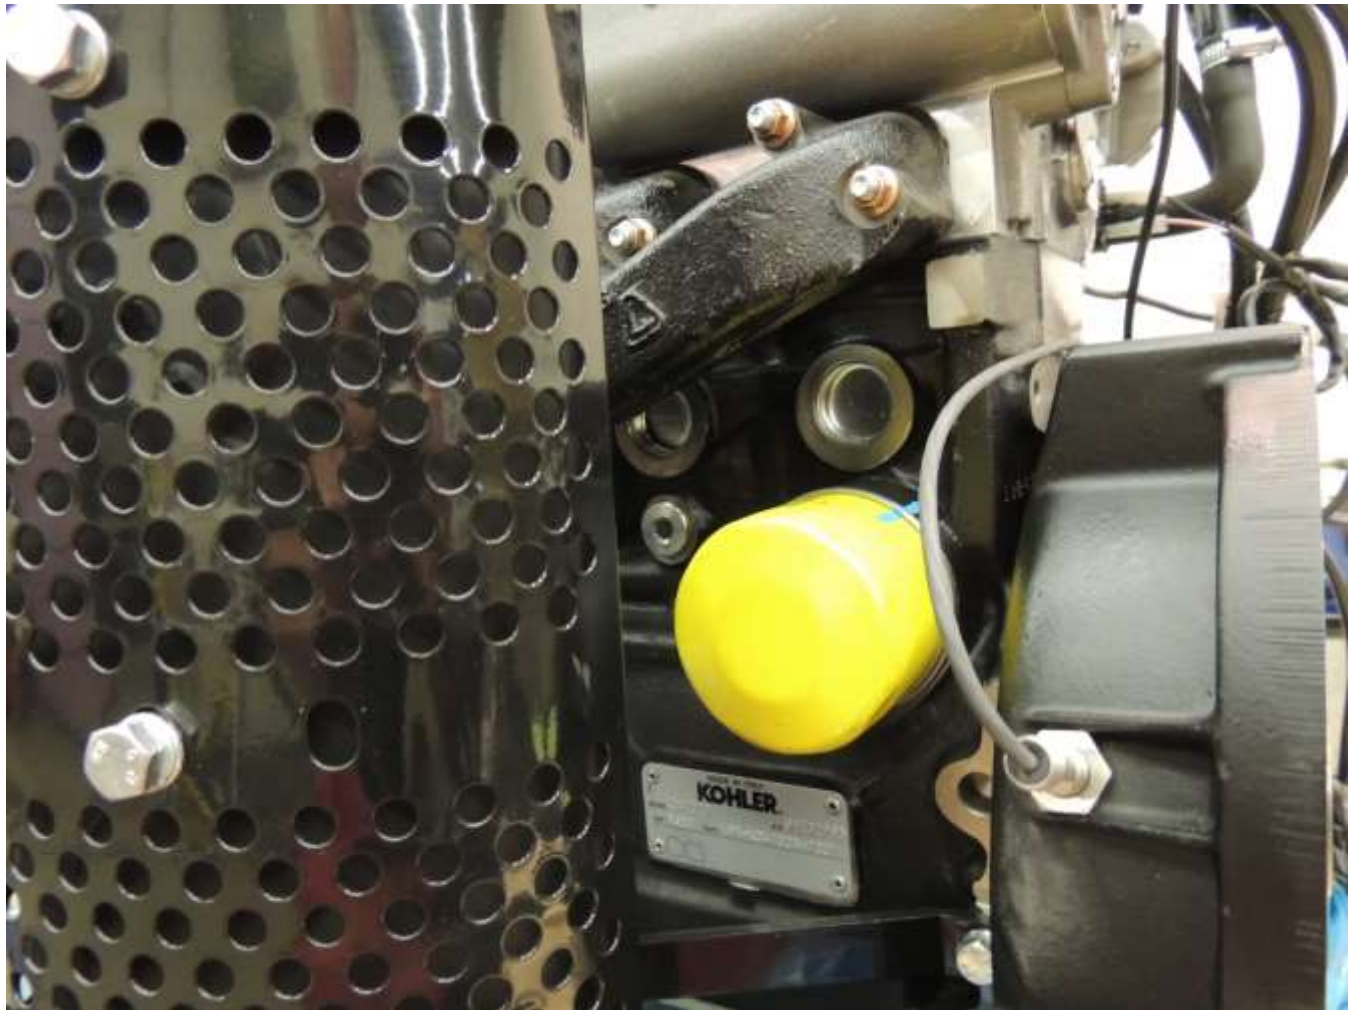

Step 3

Wiring of speed sensor

Run one wire from the speed sensor to the RPM terminal in the rev limiter box. Run the other wire from the speed sensor to the ground location. As the two wire speed sensor is a non-polarized AC sensor, either wire can be run to the RPM terminal and/or ground.